


# PRODUCT CHANGE CORNER GUSSETS

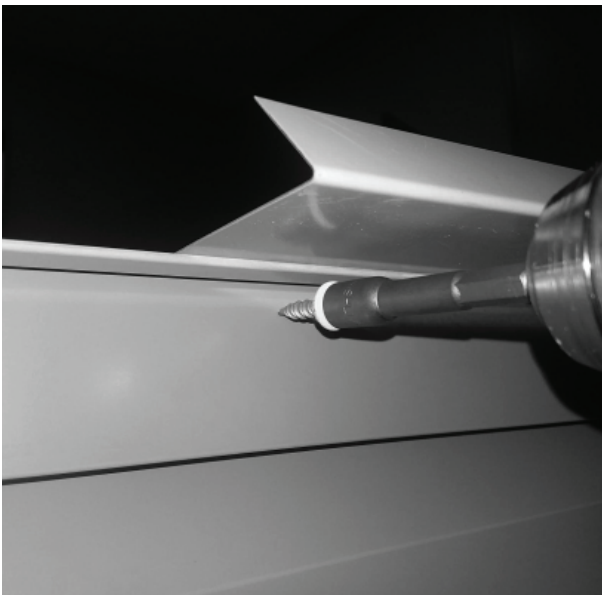

- Formed steel Corner Gussets are placed in each corner after assembly of the sides, and prior to attachment of the roof panels.
- (4) #10 x 1" Self-Drilling Ply-Lo Screw (painted) are used in each Corner Gusset.
- After the four roof panels are installed, all connectors are added and the roof cap is firmly attached - Check the cupola roof components and cap for squareness by eye, and proceed.
- Install (1) #10 x 1" Self-Drilling Screws in the overhang approx. 8" from the corners and 2" from the edge to completely secure and square up the roof.



Due to Plyco Corporation's ongoing commitment to product improvement, we reserve the right to change, without notice, product specifications, availability, prices and conditions of sale.

Products are shown with options, please contact your representative.

# PLYCO<sup>®</sup>

C-333-Cupola Corner Gusset-INST