




INSTRUCTIONS

1. Mark 8" in from hinge side of Door Panel - Detail A on Header.
2. Determine which Elbow Adjuster (left or right hand) to use on top of door.
(Note: Bottom Adjuster can be omitted at your option.)
3. Mark holes on Door Panel - Fasten bracket to Header with (2) #12 x 3/4" self-driller screws zinc plated.
4. Open Door Panel - Check bracket and hole markings based on Elbow Adjuster being fully open and Door Panel open to 90 degrees. Install bracket with (2) 1/4" x 1 3/4" Aluminum Bolts.
5. Attach #1101 Combo Door Pull in best location on panel frame - use (2) #12 x 3/4" self-driller screws zinc-plated screws.
6. Measure in 5" from edge of Door Panel to locate center of #831 Barrel Bolt. With Door Panel closed place #831 Barrel Bolt on Door Panel and mark two holes on Door Panel Frame - pre-drill holes carefully and install screws from the V-Pac.
7. Using installed Barrel Bolt as a guide, mark jamb and drill 5/16" hole to mate with bolt. Discard supplied bolt strike retainer.


DETAIL A
SCALE 1 / 4

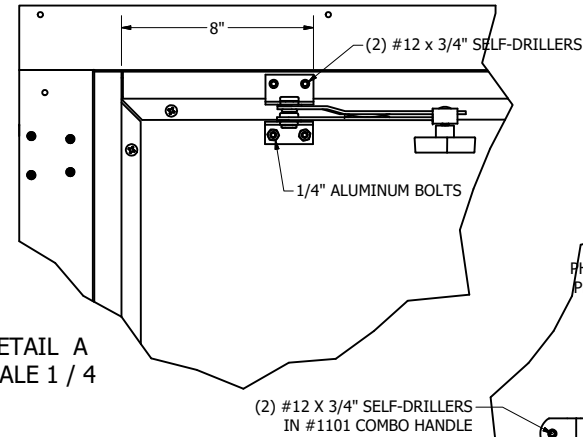

DETAIL B
SCALE 1 / 4

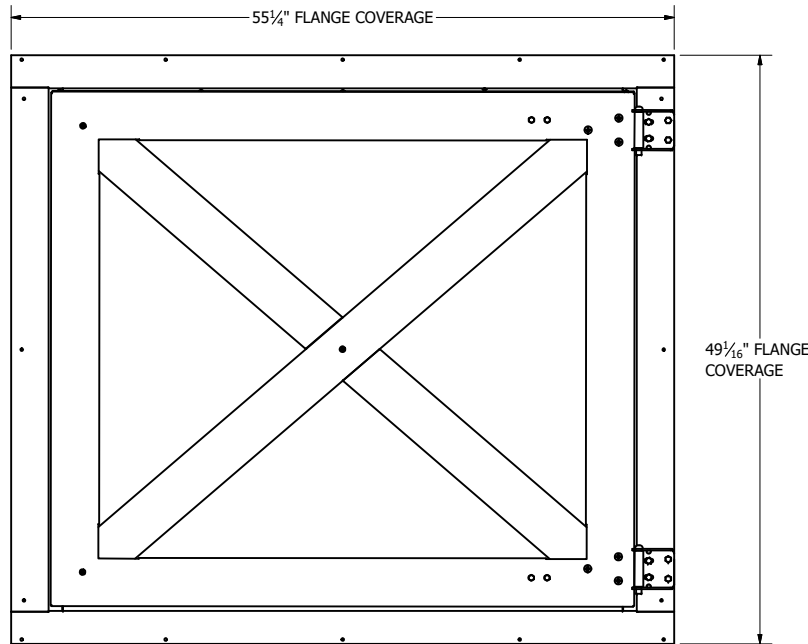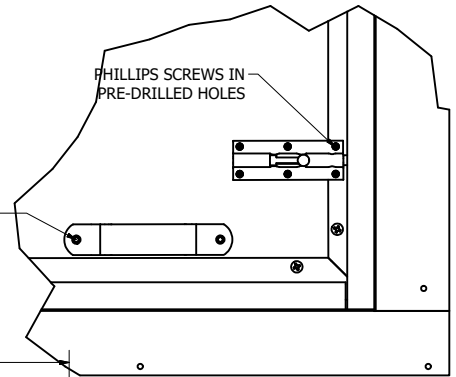

OUTSIDE ELEVATION

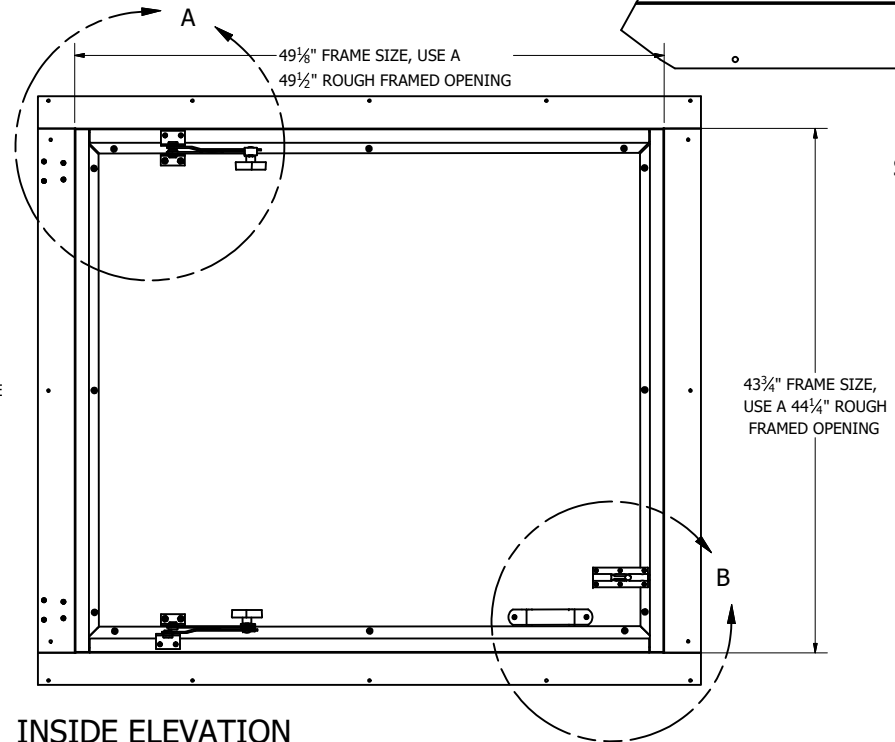

INSIDE ELEVATION

DRAWN	5/21/2020	PLYCO CORPORATION	
ACG		TITLE	
CHECKED		DDAP4350 BALE DOOR	
QA		C-329-DDAP4350 HRDW	
MFG		SIZE	DWG NO
APPROVED		C	DDAP4350 Bale Door
		SCALE	1 : 8
		SHEET 2 OF 2	